INSTALLATION INSTRUCTIONS

734-355

02/20/2004

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

MOUNTING THE BACKPLATE (Fig.1)

1. Shut off the power at the circuit breaker and remove old fixture, including the mounting hardware
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Attach the Crossbar to the junction box using two Junction Box Screws. The side of the Crossbar marked "GND" must face out.
4. Thread the Nipple part way into the center hole of the Crossbar.

CONNECTING THE WIRES (Fig. 2)

5. At this point, connect the electrical wires as follows: Connect the black wire from the fixture to the black house (hot) wire. Connect the white wire from the fixture to the white (neutral) house wire; Make sure all wire nuts are secured. You may wrap the connections with electrical tape. If you outlets have a ground wired (green or bare copper) connect fixture's ground wire to it. Otherwise connect fixture's ground wire directly to the crossbar using the green screw provided. Tuck the wire connections neatly into the ceiling junction box.

MOUNTING FIXTURE AND SHADE (Fig.1)

6. After the wires are connected, carefully tuck them inside the junction box as you place the Backplate over the nipple. Secure the Backplate against the wall using Hex Nut or Knurled Cap.
7. Place the Shade to the Backplate, matching the Threaded Screws on Shade Support Tube to the holes on either side of the shade.
8. Secure the assembly by adjusting the Threaded Screws outwards at each side of the Shade Support Tube until it is wide enough for the shade to be properly supported.
9. Install light bulbs in accordance with fixture specifications, **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!)**

Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

Fig. 1

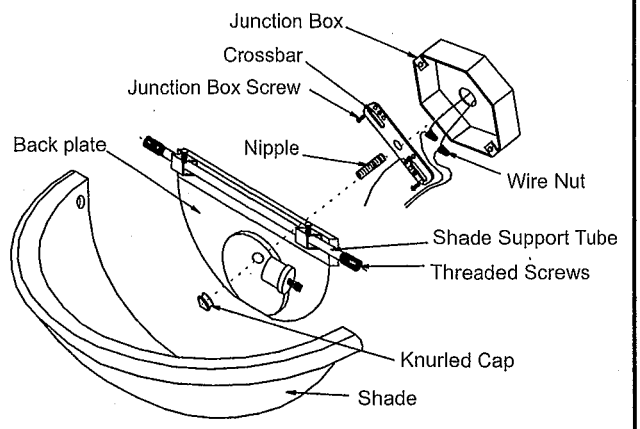

Fig. 2

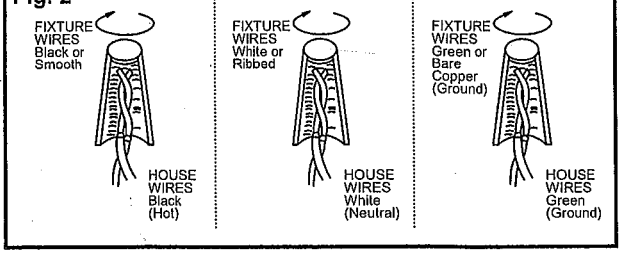
FIXTURE WIRES Black or Smooth
HOUSE WIRES Black (Hot)
FIXTURE WIRES White or Ribbed
HOUSE WIRES White (Neutral)
FIXTURE WIRES Green or Bare Copper (Ground)
HOUSE WIRES Green (Ground)

american lighting association